

Visualisations

When the player is used in the car, it will automatically display a text-only information display. This is intentional, so as not to cause undue distraction to the driver of the vehicle.

Should you wish to restore the display to the previously selected visual, press and hold the bottom button on the front panel.

Remember that by displaying the visualisations when in control of a vehicle, you are creating a distraction to yourself and possibly other motorists. The text display override is provided for convenience only.

Equaliser

Use the volume keys to adjust the levels.

Networking

You can now select specific IP address (unicast) unit discovery in addition to broadcast in the 'Select empeg-car' panel.

Technical Specifications

The player now comes with 16MB RAM.

addendum: contents

This addendum covers changes to the car player made since the user guide included with your player was printed.

- 2** **remote control**
Replaces page 20 of the main user guide

- 4** **additional information**
 - Visualisations
 - Equaliser
 - Networking
 - Technical specifications

Remote control

The infra red remote control provides fast access to many of the player's popular and special functions. Functions in *italic* denote press and hold. See the note on page 3.



Source and Power Button*

Changes the source input between the player and auxiliary. Press and hold to put the player into standby.



Play/Pause and Hush Button*

Player: Toggles between play and pause.

Tuner/aux: Toggles the mute function.

All modes: Lower the volume to a pre-set level (attenuate).



Left and Right Buttons

Player: Skip track or when held down, fast-forward/reverse.

Tuner: Move through the preset stations.

Menu: Move through the menu items.



Menu Button

Brings up the menu. Press again to OK the selected item.



Cancel and Mark Button*

Cancels the menu or search function or moves back up through the menu levels. When playing a track, press to mark it for review.



Search Button

Player: Accesses the advanced search functions.



Select mode Button

Search mode: Toggles between 'play now' and 'append to current playlist' options when selecting using the search functions.



Sound and Equaliser Button*

Displays the sound options menu. Press and hold to bring up the equaliser.



Tuner and Bank Button*

Activates the tuner (if fitted). Press and hold to switch preset bank.



Info and Detail Button*

Cycles through the information display options. Press and hold to display detailed information about a track.



Visual Button

Cycles through the visualisations.



Volume Buttons

Adjust the volume.



Tweak order Buttons (labelled in blue)

When playing a track, pressing one of these buttons will search the playlist for other tracks with the same tag information.



For example, pressing artist will add in any other tracks found by the same artist to follow directly after the current track.



Amend playlist Buttons (labelled in red)

Repeat sets the current playlist to repeat.*



Swap changes the next track in the playlist for one from later in the playlist.

Shuffle can be switched on or off while a playlist is playing.



Time Button*

Toggles between time elapsed and time remaining when in an appropriate info display.

* These functions are not available in the software (release 1.02) which is installed on your player. Release 1.1 will have these and other features. It will be available as a free download from our website.

- Press and hold functions (power, equaliser, etc). These are shortcuts only and are still available via the menu.

- Repeat

- Mark for review

- Time